



Additional vacuum sensor for take out:

Switching from IML mode to take-out mode, backwards and forwards, can lead to handling trouble. The vacuum sensor needs to be adjusted accordingly. Support your operator and avoid failure or even downtime by adding a second vacuum sensor: one sensor will be used by the software exclusively for IML mode, the other one will be used exclusively for take-out mode.

